



AIR MIXER-HOW TO OPERATE

(COMPONENTS FOR PNEUMATIC AGITATORS)



FILTER/REGULATOR/LUBRICATOR



AIR MOTOR FOOTMOUNT



INLINE AIRFLOW VALVE



AIR OPERATED TOTE CAP MIXER



Elbow type Universal type
AIR FLOW CONTROL VALVE



AIR MOTOR



FILTER/REGULATOR/LUBRICATOR



WHITE MOUNTAIN PROCESS

MIXERS, AGITATORS & BLENDEERS **1-800-737-9619**

WHITE MOUNTAIN PROCESS PLUG AND PLAY AIR MIXERS FOR:

TOTE MIXING
DRUM AGITATION
TANK BLENDING
LAB AND CARBOY MIXERS

OUR SUGGESTED SETUP:

- 1)AIR COMPRESSOR BY CUSTOMER
- 2)AIR PRESSURE (TYPICAL 60-90 PSIG) +AIR FLOW(CFM FOR MOTOR) TO MIXER
- 3)FILTER/REGULATOR/LUBRICATOR(FRL)

NOTE: IF NON LUBE MOTOR, ASSURE CLEAN, DRY, INSTRUMENT AIR AND USE FILTER REGULATOR

- 4)AIR INLET TO MIXER MOTOR
- 5)OUTLET AIRFLOW CONTROL VALVE TO MUFFLER OR PIPE TO VENT